Mounting and instructions

FOLDOUT LADDERS.COM



Pull out the locking/release pin


Open the ladder and it's ready for use

The ladder can hold an entire family at once

Maintenance/control:

We advise performing a yearly functional test of the ladder, as well as controlling the screws and attachment to the wall.

Mounting and instructions:

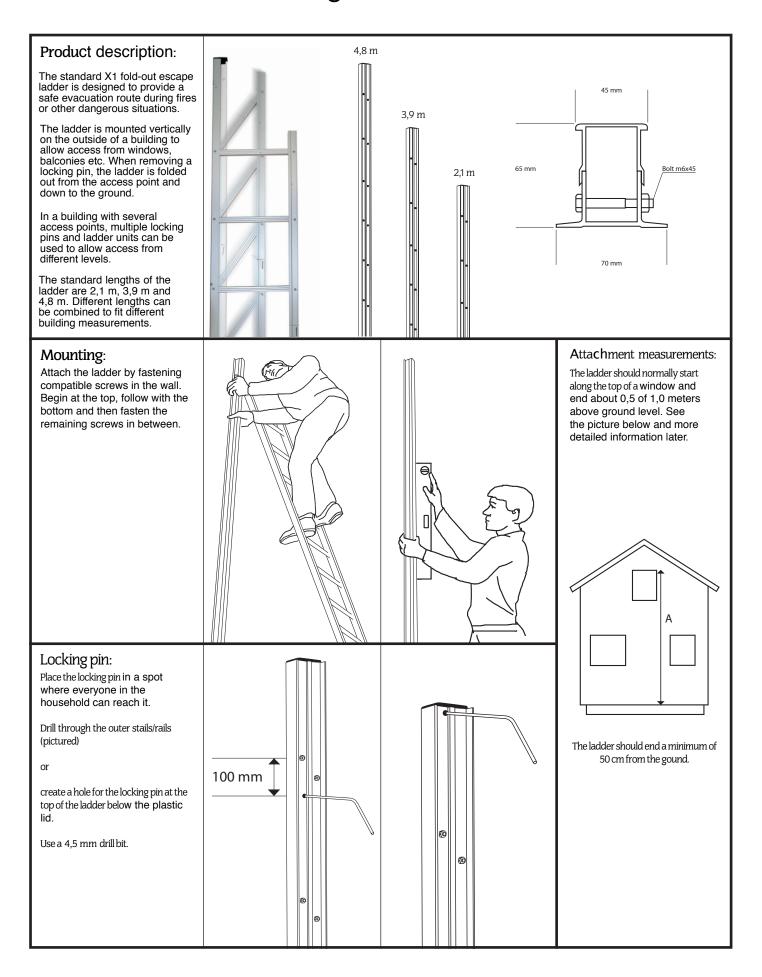

Mounting and instructions for use / Placement on wall

Traditional window: Windows that tilt at the center: **Bottom placement:** Minimum 50 cm above Bottom and top: The same as ground level. for the traditional window, but make sure to have a good Top placement: distance from the window to The ladder should be placed along the upper part of the window frame or 135 cm above the lower part of the frame (minimum 100 cm) make accessing the ladder easy. 30 cm is ideal. Distance from window: Maximum 35 cm. Between two windows: Double windows: Bottom and top placement: **Bottom and top placement:** Same as above. Same as above. Step-out platform: Mount the Step-out platform: If platform appr. 60 cm below the there's a big distance window. Make sure it's in a spot between the windows: see that makes it easy to access picture below. Place the both the platform and the ladder. platform 45-65 cm below If it's not possible to mount the where the window opens. Distance from the step-out ladder on the side of the platform to the ladder window(s), you can place the should be max. 70 cm. ladder below, in the middle. Handgrip: We recommend using a handgrip between the ladder and windows. From balcony - distance 10 cm or 50 cm. Maks **Bottom placement: Minimum** 50 cm from ground level. Top placement: The ladder should be mounted 135 cm above the balcony railing, Alt.II minimum 100 cm. If you want to mount the ladder close to the balcony (10 cm), the ladder can start along the top of the railing (note: this is only suitable when the distance is 10 cm.) \Box \Box

Mounting and instructions for use

